


**EN** Operating and installation instructions PT11

Tepan stainless steel grill

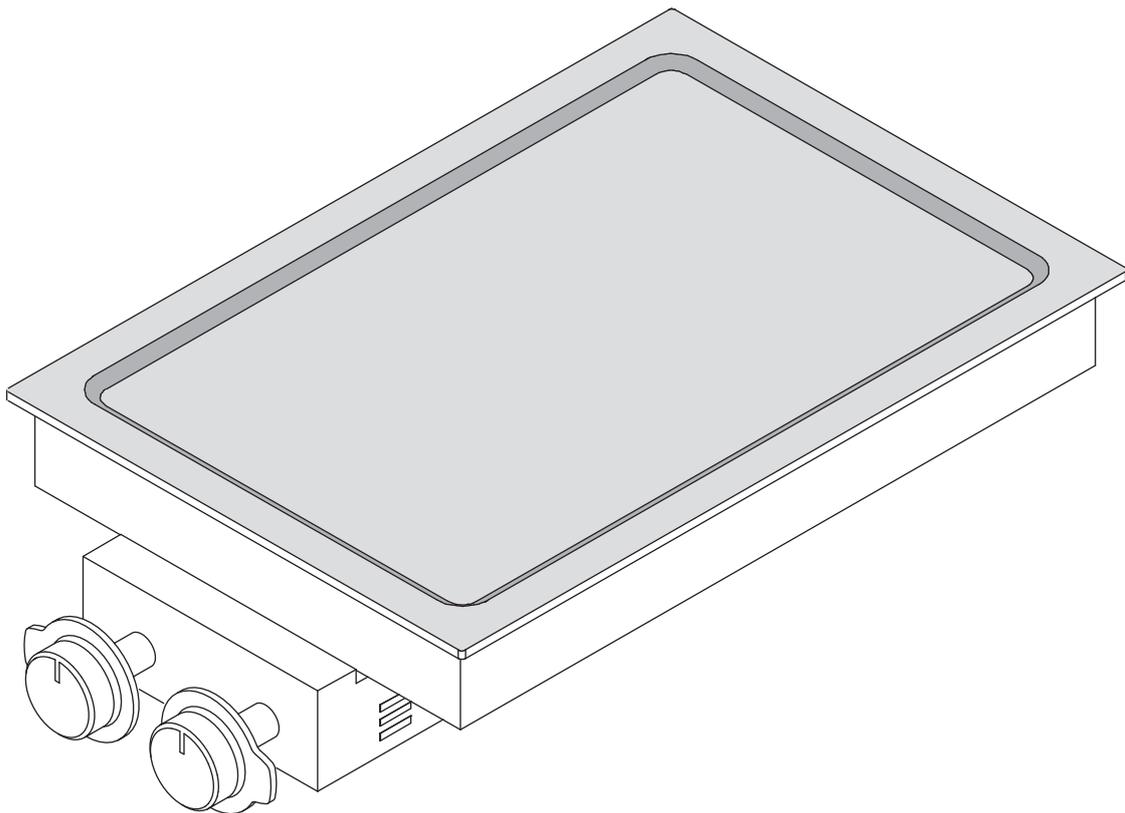

**PT11UMEN-001**

**Operating and installation instructions:**

Original

Translation

**Manufacturer**

**BORA Lüftungstechnik GmbH**

Rosenheimer Str. 33

83064 Raubling

Germany

**Contact**

T +49 (0) 8035 / 907-240

F +49 (0) 8035 / 907-249

info@bora.com

www.bora.com

The distribution and duplication of this document, as well as the use and disclosure of its contents are prohibited unless expressly authorised.

© BORA Lüftungstechnik GmbH, 2016

All rights reserved.

# Table of Contents

<b>1</b>	<b>General</b>	<b>4</b>
<b>2</b>	<b>Safety</b>	<b>6</b>
2.1	General safety precautions .....	6
2.2	Safety instructions, operation .....	7
2.3	Safety instructions, assembly.....	8
2.4	Safety instructions, spare parts .....	9
2.5	Use as intended .....	9
<b>3</b>	<b>Technical data</b>	<b>10</b>
<b>4</b>	<b>Device description</b>	<b>11</b>
4.1	Structure .....	11
4.2	Operating panel and operating principle .....	11
4.2.1	Operation .....	11
4.2.2	Operating indicator light.....	11
4.3	Functional principle.....	11
4.3.1	Power levels .....	11
<b>5</b>	<b>Installation</b>	<b>12</b>
5.1	Checking the deliverables .....	12
5.2	Tool and aids.....	12
5.3	Assembly instructions .....	12
5.3.1	Safety distances.....	12
5.4	Cut-out dimensions .....	12
5.5	Installing the cooktop.....	14
5.5.1	Installing the control box behind the floor unit fixed front panel.....	14
5.5.2	Installing the cooktop.....	15
5.6	Power connection.....	16
5.7	Handover to user.....	17
<b>6</b>	<b>Operation</b>	<b>18</b>
6.1	Initial operation .....	18
6.2	Switching cooktop on/off .....	18
6.2.1	Switch on the grilling zone .....	18
6.2.2	Adjusting the power level.....	18
<b>7</b>	<b>Cleaning and Maintenance</b>	<b>19</b>
7.1	Cleaning agents.....	19
7.2	Maintaining the cooktop .....	19
7.3	Cleaning the cooktop .....	19
7.3.1	Cleaning the stainless steel grill surface.....	19
7.3.2	Cleaning the control knobs .....	20
<b>8</b>	<b>Troubleshooting</b>	<b>21</b>
<b>9</b>	<b>Decommissioning, disassembly and disposal</b>	<b>22</b>
9.1	Decommissioning .....	22
9.2	Disassembly .....	22
9.3	Disposing of the product in an environmentally friendly way.....	22
<b>10</b>	<b>Warranty, service and spare parts</b>	<b>23</b>
10.1	Warranty.....	23
10.2	Service .....	23
10.3	Spare parts.....	23

# 1 General

## Target group

These operating and assembly instructions are intended for the following target groups:

Target group	Requirements
Users	The Device may be used by children from the age of 8 as well as by people with limited physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised, have been instructed in the safe use of the device and have understood the dangers involved. Children must be supervised. All safety and warning information and handling instructions in the operating manual must be followed.
Ambitious DIYers	Ambitious DIYers may carry out all the necessary carpentry and assembly work themselves providing that they have the necessary skills and knowledge. They must not connect the current and gas themselves.
Assembly expert	The assembly expert must carry out all the necessary carpentry and assembly work taking existing regulations into account. The current and gas connections must be approved for the system in use by a certified electrician or gas engineer before use.
Electrical expert	The electrical connection must only be executed by a certified electrician. He/she also assumes responsibility for the proper electrical installation and commissioning.
Expert gas connection	The gas connection must only be implemented by a certified gas engineer. He/she also assumes responsibility for the proper gas installation and commissioning.

Tab. 1.1 Target groups

<b>INFO</b>	<p>BORA Holding GmbH, BORA Vertriebs GmbH &amp; Co KG, BORA APAC Pty Ltd and BORA Lüftungstechnik GmbH - hereinafter referred to as BORA - shall not assume any liability for damage caused by non-compliance with these documents nor by improper assembly!</p> <p>The electricity and gas connections must be implemented by a certified engineer. Assembly must only take place in compliance with the applicable norms, regulations and laws. All safety and warning information and handling instructions in the operating and assembly instructions must be followed.</p>
-------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## Validity of the operating and assembly instructions

This manual is valid for several versions of the device. For this reason, it is possible that individual features are described in the manual that do not apply to your device.

## Other applicable documents

Additional documents are valid as well as these operating and assembly instructions, and likewise need to be observed.

Please observe all documents included in the scope of delivery.

<b>INFO</b>	BORA cannot assume any liability for damage caused by non-compliance with these documents!
-------------	--------------------------------------------------------------------------------------------

## Guidelines

These devices meet the following EC guidelines:

- 2014/30/EC EMC Directive
- 2014/35/EC Low-Voltage Directive
- 2009/125/EC Ecological Design Directive
- 2011/65/EC RoHS Directive
- 2012/19/EC WEEE Directive

## Depiction of information

We used standard formatting, numbering, symbols, safety instructions, terms and abbreviations so that you can work quickly and safely when using this manual.

**Instructions** are marked with an arrow.

► Always perform all instructions in the prescribed order. **Enumerations** are indicated with a square bullet point at the start of the line.

- Enumeration 1
- Enumeration 2

<b>INFO</b>	Information notes point to special features that must be taken into account.
-------------	------------------------------------------------------------------------------

## Safety and warning instructions

The safety and warning instructions in this manual are emphasised with symbols and signal words.

Safety and warning instructions are structured as follows:

**WARNING SYMBOL AND SIGNAL WORD!**  
**Type and source of the danger**  
 Results of non-compliance

- Measures to minimise risk

Please note:

- The warning symbol draws your attention to the risk.
- The signal word indicates the severity of that risk.

Warning symbol	Signal word	Risk
	<b>Danger</b>	Indicates an immediate, hazardous situation which causes death or serious injury if not respected.
	<b>Warning</b>	Indicates a potentially hazardous situation which can cause death or serious injury if not respected.
	<b>Caution</b>	Indicates a possible hazardous situation which can cause minor injury if not respected.
–	<b>Caution</b>	Indicates a situation which can cause minor injury if not respected.

Tab. 1.2 Meaning of the warning symbols and signal words

## 2 Safety

### 2.1 General safety precautions

---

**INFO** The product complies with the mandatory safety provisions. The user is responsible for cleaning, care and safe use of the device. Any improper use may lead to personal injury and property damage.

---

- This operating and installation instructions contain important information concerning assembly and operation. It protects you from injury and prevents damage to the product. You can find contact data to get further information and answers to questions about the use of the product on the last page of this operating and installation instructions.
- The term “device” is used to refer to cooktop, cooktop extractor or cooktop with integrated cooktop extractor.
- ▶ Read this operating and installation instructions in full before you assemble the device and start to use it.
- ▶ Always keep these operating and installation instructions to hand so it is available when needed.
- ▶ After selling the device, pass on the operating and installation manual to the new owner.
- ▶ Carry out all work with great care and attention.
- ▶ Check the device for visible damage after unpacking.
- ▶ Do not install a damaged device.
- ▶ Do not use the device until installation is complete. Only in this way a safe operation can be guaranteed.
- ▶ Make sure contact with hot cooking surfaces is not possible.
- ▶ Avoid over-cooking.
- ▶ Turn the device off after use.
- ▶ Keep pets away from the device.

#### Recirculated air mode

---

**INFO** Every time the device is used for cooking, supplementary moisture is released into the room air.

---



---

**INFO** In the recirculated air mode, only a small amount of moisture is removed from the cooking vapours.

---

- ▶ Make sure that the room is sufficiently ventilated to the outside air in the recirculated air mode, e.g. through an open window.
- ▶ Ensure a normal and comfortable indoor climate (45-60% humidity), e.g. through natural ventilation openings or domestic ventilation systems.
- ▶ Set the cooktop extractor to a low setting for about 15 minutes or activate the automatic after-run after every use in the recirculated air mode.

#### When there are children and people with special needs in the house

- This device may be used by children from the age of 8 as well as by persons with limited physical, sensory or mental capabilities or a lack of experience and/or knowledge, provided they are supervised, have been instructed in the safe use of the device and have understood the dangers involved.
- Do not leave children unattended when they are near the device.
- Children must not play with the device.
- ▶ Do not store any objects that could be of interest to children in storage spaces above or behind the device. Otherwise, the children will be tempted to climb onto the device.
- ▶ Keep children and other persons away from the cooking surfaces.

#### Unauthorised modifications

Due to unauthorised modifications

The device can constitute a hazard.

- ▶ Do not make any changes to the device.

#### Cleaning and Maintenance

The device must be cleaned at regular intervals. Dirt can lead to damage or odour nuisance.

Remove dirt immediately.

- Any work involving cleaning and user maintenance must not be carried out by children unless they are supervised at all times while doing so.
- ▶ Do not use a steam cleaner for cleaning. Steam can cause a short circuit on live parts and thus lead to property damage (see the Cleaning chapter).
- ▶ Do not place any hot cookware in the area of the control panel so as not to damage the underlying electronics.

- ▶ When cleaning the device, water must not penetrate the interior of the device. Use only a slightly damp cloth. Never spray the device with water. Water penetration can cause damage!
- ▶ Whenever possible, clean the cooktop after every use.
- ▶ Clean the cooktop only after it has cooled down.
- ▶ When cleaning, only use non-abrasive cleaning agents to prevent scratching and abrasion on the surface.
- ▶ Make sure that the base of the cookware as well as the cooking zone are clean and dry.
- ▶ Always lift (do not drag!) the cookware to prevent scratching and abrasion on the surface.

## 2.2 Safety instructions, operation

### Cooktop



**DANGER!**  
**Danger of fire caused by leaving the cooktop unattended!**

Oil or fat in the pot can quickly heat up and ignite.

- ▶ Never leave oil or fat to heat up unattended.
- ▶ Never extinguish oil and fat fires with water.
- ▶ Suffocate the fire, for example by using a lid.



**DANGER!**  
**Danger of explosion caused by flammable liquids!**

Flammable liquids in the vicinity of the cooktop can explode and cause serious injury.

- ▶ Do not place any flammable liquids in the vicinity of the cooktop.



**DANGER!**  
**Danger of electric shock!**

Cracks, fissures or fractures in the glass ceramic panel can damage the underlying electronics. This can cause an electrical shock.

- ▶ If there are any cracks, fissures or fractures in the glass ceramic, switch the device off immediately.
- ▶ Safely disconnect the device from the mains using miniature or automatic circuit breakers, fuses or contactors.



**WARNING!**  
**Risk of burns caused by a hot cooktop!**

The cooktop and its touchable parts become hot during operation. After turning off the cooking zone, allow it to cool down to less than 60°C first. Touching hot surfaces can lead to serious burns.

- ▶ Do not touch the hot cooktop.
- ▶ Keep children away from the hot cooktop unless they are under constant supervision.



**WARNING!**  
**Danger of fire caused by objects on the cooktop!**

The cooktop and its touchable parts become hot when the cooking zone is switched on and while it is cooling down. Objects on the cooktop can heat up and ignite.

- ▶ Do not leave any objects on the cooktop.



**WARNING!**  
**Risk of burns caused by hot objects!**

The cooktop and its touchable parts become hot when the cooking zone is switched on and while it is cooling down. Objects (pot lid, cooktop extractor cover) on the cooktop become hot very quickly and can lead to serious burns.

- ▶ Do not leave any objects on the cooktop.
- ▶ Use suitable aids (pot cloths, thermal glove).

**CAUTION!****Escaping hot liquids!**

Unattended pans can boil over allowing hot liquids to escape.

- ▶ Always keep an eye on pans while cooking.
- ▶ Short cooking sessions must be constantly monitored.

## 2.3 Safety instructions, assembly

Installation and assembly of the device may only be carried out by trained personnel who are familiar with and comply with common national regulations and supplementary regulations of the local utility companies.

Work on electrical parts must only be carried out by trained electrical personnel.

The electrical safety of the device is only guaranteed if it is connected to a properly installed protective conductor system. Make sure that these basic safety precautions have been taken.

### Cooktop

**DANGER!****Danger of electric shock!**

Connecting the device incorrectly to the mains poses a risk of electric shock.

- ▶ Make sure that the device has a fixed connection to the mains voltage.
- ▶ Make sure that the device is connected to a properly installed protective conductor system.
- ▶ Make sure that technical equipment is provided to allow for all of the device's poles to be disconnected from the mains with a contact opening width of at least 3 mm (miniature and automatic circuit breakers, fuses, contactors).

**DANGER!****Danger of electric shock!**

The connection cable can be damaged if it comes into contact with hot cooking zones. A damaged connection cable can cause a (fatal) electrical shock.

- ▶ Make sure that the connection cable does not come into contact with hot cooking surfaces.
- ▶ Make sure that the connection cable is not caught or damaged.

**CAUTION!****Back injury caused by heavy loads!**

When removing and inserting the device, incorrect handling may cause injuries to the limbs and the trunk.

- ▶ Always lift the device out of the packaging with two persons.
- ▶ Always place the device onto the worktop cut-out with two persons.
- ▶ Use suitable aids to prevent damage to the limbs and the trunk.

- ▶ Check the device for visible damages before installing it.
- ▶ Do not install a damaged device.
- A damaged device may put your safety at risk!

Repair and maintenance work may only be carried out by specialists authorised by the manufacturer.

### Safety instructions, disassembly and disposal

Disassembly of the device may only be carried out by trained personnel who are familiar with and comply with common national regulations and supplementary regulations of the local utility companies.

Work on electrical parts may only be carried out by trained electrical personnel.

**DANGER!****Danger of electric shock!**

Disconnecting the device incorrectly from the mains poses a risk of electric shock.

- ▶ Safely disconnect the device from the mains using miniature or automatic circuit breakers, fuses or contactors.
- ▶ Use a suitable measuring device to ensure that the device is de-energised.

**DANGER!****Risk of suffocation!**

Parts of the packaging (e.g. films, polystyrene) can be fatal to children.

- ▶ Store packaging materials away from the reach of children.
- ▶ Dispose of packaging correctly and promptly.

not using the device as intended, as is using it beyond the purpose described here.

BORA shall not assume any liability for damages caused by improper use or incorrect operation.

**All misuse is prohibited!****INFO**

BORA Holding GmbH,  
BORA Vertriebs GmbH & Co KG,  
BORA APAC Pty Ltd and  
BORA Lüftungstechnik GmbH shall not assume any liability for damage arising from non-adherence to the safety and warning instructions.

## 2.4 Safety instructions, spare parts

**WARNING!****Risk of injury and damage to property!**

Incorrect parts can lead to injury to persons or damage to device! Modifications, attachment parts or conversions to device can impair safety.

- ▶ Only use original spare parts when carrying out repairs.

## 2.5 Use as intended

The device is solely intended for preparing food in private households.

This device is not designed for:

- use outdoors
- installation in vehicles
- heating the room
- use in non-fixed installation sites (e.g. on ships)
- use with an external timer or separate remote control system.

Not using the device as described in this operating and assembly manual is considered

### 3 Technical data

Parameter	Value
Supply voltage	380 - 415 V 2N
Frequency	50/60 Hz
Power consumption	4.8 kW
Fuse protection, minimum	2 x 16 A
Dimensions (width x depth x height)	370 x 540 x 68 mm
Control box dimensions (width x depth x height)	190 x 121 x 71 mm
Weight (incl. accessories/packaging)	19.7 kg
Cooktop	
Power levels	1 - 9, infinitely variable
Front cooking zone	300 x 235 mm    2400 W
Back cooking zone	300 x 235 mm    2400 W
Temperature control range	60 - 250°C

Tab. 3.1 Technical data

#### Device dimensions

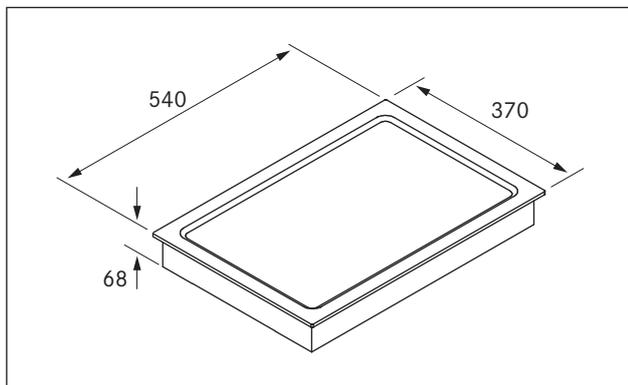


Fig. 3.1 Device dimensions

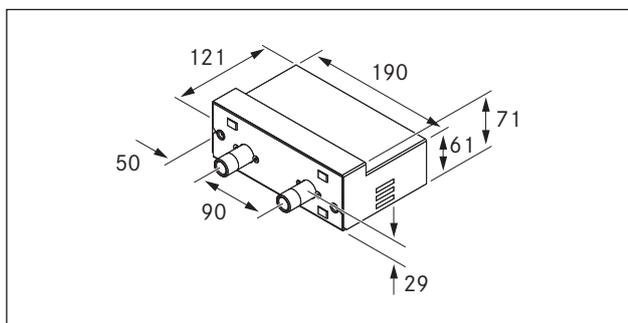


Fig. 3.2 Control box dimensions

## 4 Device description

Observe all safety and warning information during operation (see the Safety chapter).

The Tepan stainless steel grill has the following features:

- Two grilling zones
- Two control knobs
- Cooking zone indicators
- Control box with childproofing feature

### 4.1 Structure

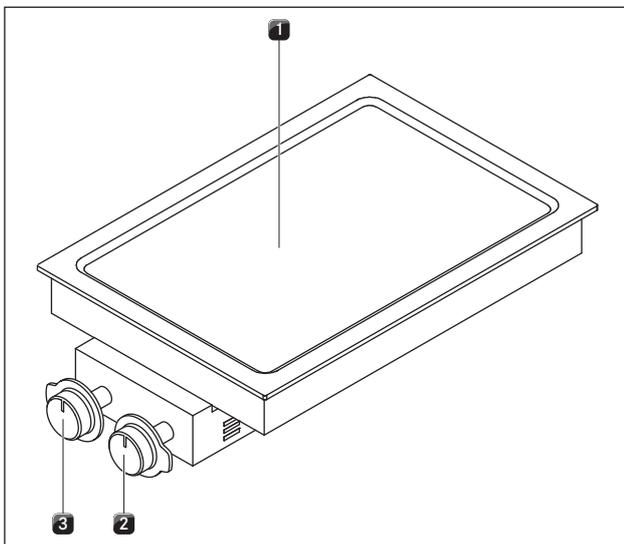


Fig. 4.1 Tepan stainless steel grill

- [1] Two grilling zones  
 [2] Control knob for the back grilling zone  
 [3] Control knob for the front grilling zone

### 4.2 Operating panel and operating principle

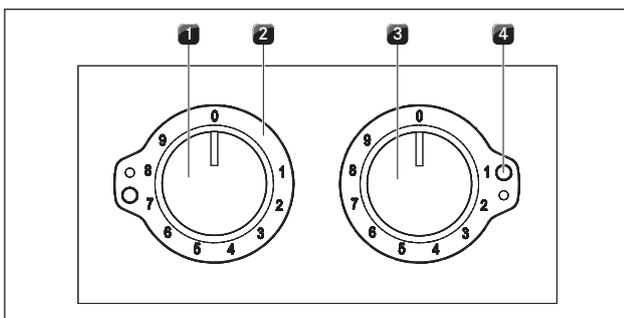


Fig. 4.2 Control knobs

- [1] Control knob for the front grilling zone  
 [2] Power level sleeve  
 [3] Control knob for the back grilling zone  
 [4] Operating indicator light

Display panel	Display	Meaning
Operating indicator light	On	Tepan grilling zone switched on
	Off	Tepan grilling zone switched off

Tab. 4.1 Meaning of display

#### 4.2.1 Operation

The operating panel is equipped with two control knobs. To operate the appliance, set the relevant control knob to the corresponding power level.

#### 4.2.2 Operating indicator light

If the indicator light illuminates, the allocated cooking zone is switched on.

### 4.3 Functional principle

There are two heating elements under the grilling zone. When the grilling zone is switched on, the heating element generates heat that heats up the grill surface directly. The power levels can be continuously adjusted between 1-9.

#### 4.3.1 Power levels

The power output of the Tepan stainless steel grill heats food extremely quickly. A slight adjustment is needed in comparison to conventional cooking systems when selecting the power level in order to avoid burning food.

Activity	Power level
Keeping cooked meals warm	1
Steaming fruit, e.g. apple slices, peach halves, banana slices	2-3
Browning chopped vegetables, fried eggs, veal, poultry	4-5
Browning breaded or battered fish, pancakes, sausages, pork, lamb	5-6
Browning potato fritters, prawns, corn on the cob and escalopes	6-7
Fast browning beef, fish, meatballs	8-9

Tab. 4.2 Recommendations for power levels

The specifications provided in the table are standard values.

## 5 Installation

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Follow the enclosed manufacturer's information.

**INFO** The cooktop must not be installed above cooling devices, dishwashers, stoves, baking ovens, washing machines or driers.

**INFO** The contact surface of the worktops and wall sealing strips must be made of a heat-resistant material (up to approx. 100 °C).

**INFO** Worktop cut-outs must be moisture-sealed using suitable means or, where necessary, fitted with a thermal insulator.

### 5.1 Checking the deliverables

Name	Quantity
Control box adjustment plates	6
Control knobs	2
Operating and installation instructions	1
Fixing nuts	2
Cooktop mounting screws	4
Control box fixing screws	2
Drilling template	1
Height adjustment plate set	1
Allen key	1
Cooktop	1
Power level sleeve	2
Mounting bracket	1
Cooktop mounting straps	4
Tepan scraper	1

Tab. 5.1 Scope of delivery

- ▶ Check the scope of delivery for damage and make sure it is complete.
- ▶ If there are any missing or damaged parts, please notify BORA After Sales Service immediately.
- ▶ Do not under any circumstances install parts which are damaged.
- ▶ Dispose of transport packaging in the proper manner (see the Decommissioning and Disposal chapter).

### 5.2 Tool and aids

The following tools are required for the correct installation of the cooktop:

- Pencil
- Drill or cordless drill with Forstner bit Ø 30 mm
- Drilling template (included in scope of delivery)
- Phillips screwdriver Z2
- Silicone sealant for sealing cutting surfaces

### 5.3 Assembly instructions

#### 5.3.1 Safety distances

- ▶ Maintain the following safety distances:

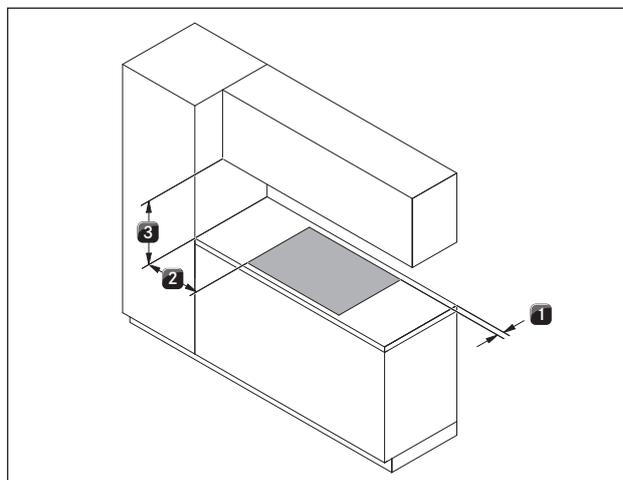


Fig. 5.1 Minimum distance

- [1] Minimum distance of 50 mm at the back from of the worktop cut-out to the rear edge of the worktop.
- [2] Minimum distance of 50 mm from the left and right of the worktop cut-out to the adjacent cabinet or wall. For ergonomic reasons and to ensure efficient cooktop extraction, a minimum distance of 300 mm is recommended.
- [3] Minimum distance of 700 mm between the worktop and the wall unit. A minimum distance of 1000 mm is recommended for ergonomic reasons.

### 5.4 Cut-out dimensions

#### Preparing the worktop

- ▶ Create the worktop cut-out taking into account the specified cut-out dimensions.
- ▶ Make sure that the cutting surfaces of the worktops are properly sealed.
- ▶ Comply with the instructions of the worktop manufacturer.

### Worktop overhang

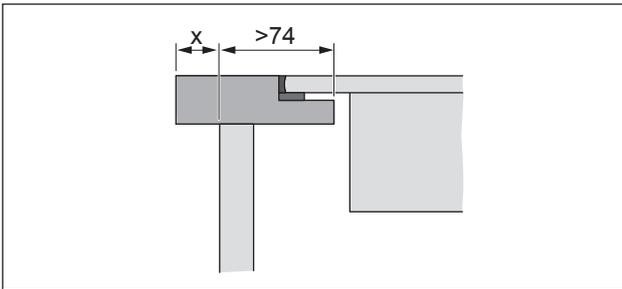


Fig. 5.2 Worktop overhang

► Please note the worktop overhang x when creating the worktop cut-out. Applies to both flush installation and surface mounting.

### Flush installation

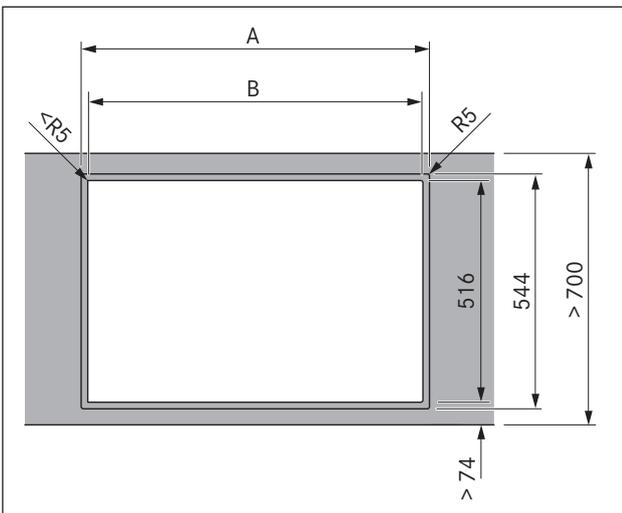


Fig. 5.3 Flush installation

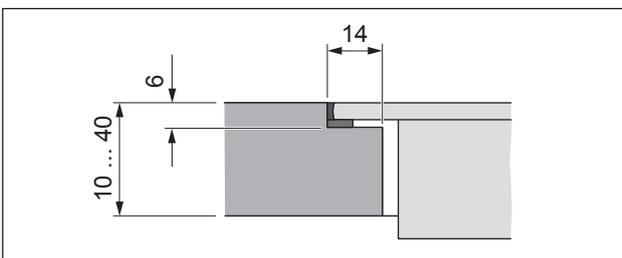


Fig. 5.4 Dimension of groove for flush installation

**INFO** If the induction glass ceramic wok is used, the groove dimensions must be increased to 7 mm for flush installation.

### Surface installation

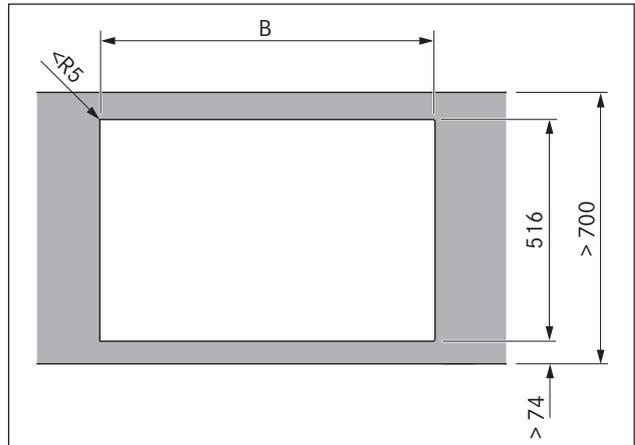


Fig. 5.5 Surface installation

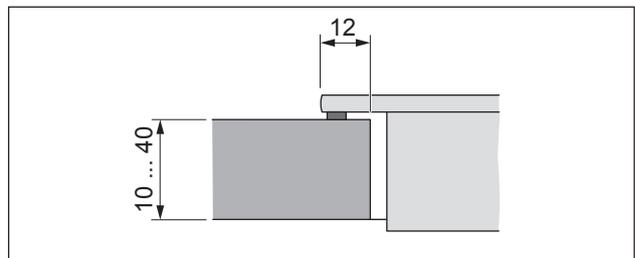
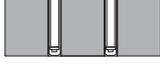


Fig. 5.6 Surface mounting cut

Cut-out dimensions when installing cooktops or cooktops and the cooktop extractor next to each other:

Cooktops / cooktop extractor	A in mm	B in mm	
	1/0	374	346
	2/0	745	717
	3/0	1116	1088
	1/1	485	457
	2/1	856	828
	3/2	1338	1310
	4/2	1709	1681

Tab. 5.2 Cut-out dimensions

## 5.5 Installing the cooktop

**INFO** A gap of one millimetre should be planned between the built-in appliances.

**INFO** A gap of two millimetres should be planned around the built-in appliances.

**INFO** The mounting rail supplied with the cooktop should be installed between the cooktops as well as between the cooktops and the cooktop extractor.

**INFO** Cable protection (a false floor) should be mounted below the appliance. This needs to be removable for maintenance work.

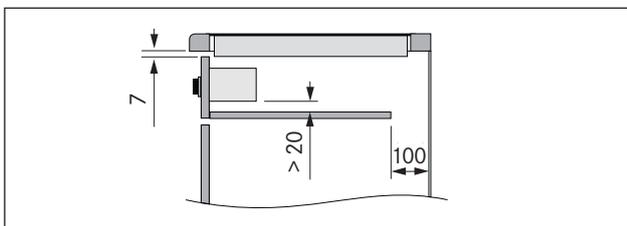


Fig. 5.7 Side view of the cable protection and ventilation

- Cross bars on the kitchen unit in the area of the worktop cut-out may need to be removed.
- The drawers and/or shelves in the floor unit must be removable for maintenance and cleaning purposes.

### 5.5.1 Installing the control box behind the floor unit fixed front panel

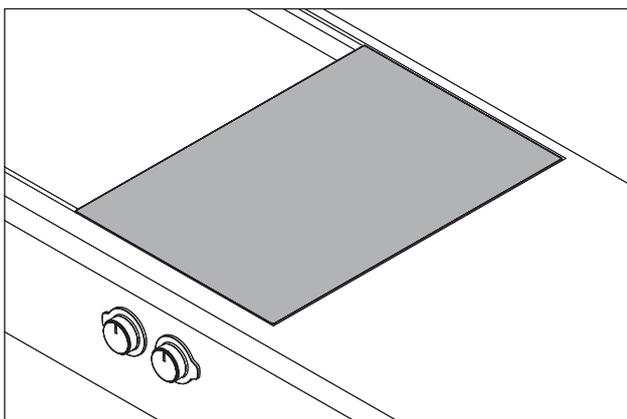


Fig. 5.8 Installed control box and cooktop

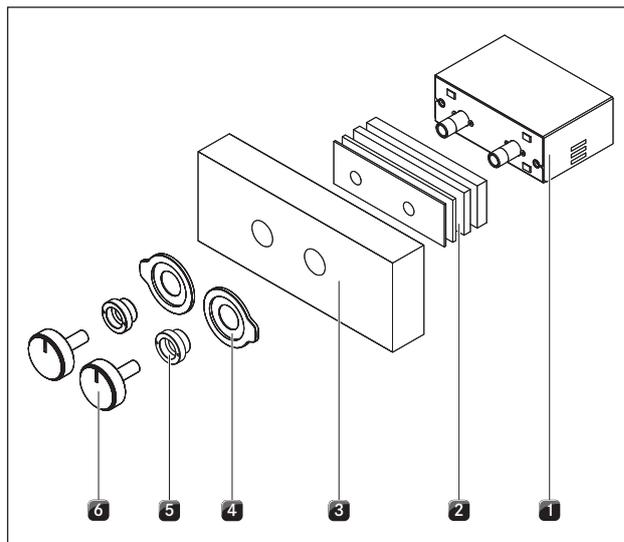


Fig. 5.9 Control box structure

- [1] Control box
- [2] Adjustment plates
- [3] Fixed front panel (not included in scope of delivery)
- [4] Power level sleeve
- [5] Nuts
- [6] Control knobs

- Draw the bore holes accordingly with the aid of the drilling template provided.

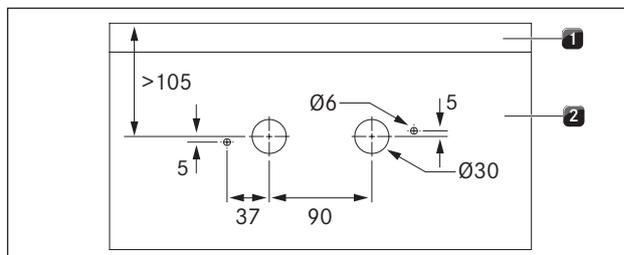


Fig. 5.10 Drilling template

- [1] Worktop
- [2] Fixed front panel

- Pre-drill the bore holes to prevent tearing out the fixed front panel.

#### Determine the number of adjustment plates

- The total dimensions of the adjustment plates [2] and the fixed front panel [3] should be 36 mm.
- The total dimensions of 36 mm must be adhered to in order to ensure that the control box [1] functions smoothly.

Panel thickness [mm]	Total thickness of adjustment plates [mm]	Adjustment plates [quantity]			
		10 mm	5 mm	3 mm	2 mm
34	2	-	-	-	1
33	3	-	-	1	-
32	4	-	-	-	2
31	5	-	-	1	1
30	6	-	-	2	-
29	7	-	1	-	1
28	8	-	1	1	-
27	9	-	1	-	2
26	10	1	-	-	-
25	11	-	1	2	-
24	12	1	-	-	1
23	13	1	-	1	-
22	14	1	-	-	2
21	15	1	1	-	-
20	16	1	-	2	-
19	17	1	1	-	1
18	18	1	1	1	-
17	19	1	1	-	2
16	20	1	1	1	1
15	21	1	1	2	-
14	22	1	1	1	2
13	23	1	1	2	1

Tab. 5.3 Adjustment plate overview

### Secure the control box

- ▶ Position the control box [1] with the attached adjustment plates [2] from the back into the bore holes in the fixed front panel.
- ▶ Attach the two power level sleeves [4] to the front of the fixed front panel.

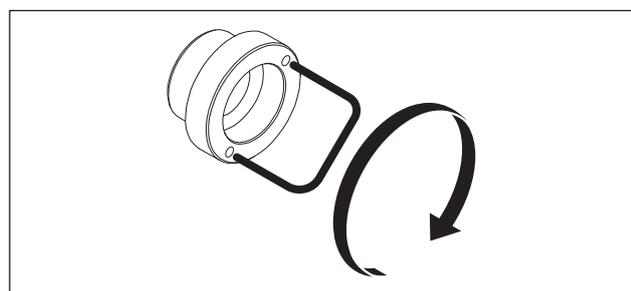


Fig. 5.11 Tighten the fixing nuts

- ▶ Screw on the fixing nuts [5] with the mounting bracket and tighten the fixing nuts with max. 10 Nm.
- ▶ Insert the lens from the front into the power level sleeve.
- ▶ Put on the control knob [6].

### Adjust the control knob

For fine adjustment, the distance between the control knob and the power level sleeve can be set.

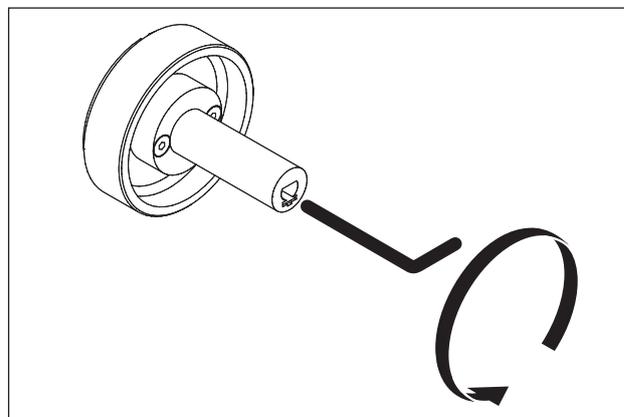


Fig. 5.12 Position control knob

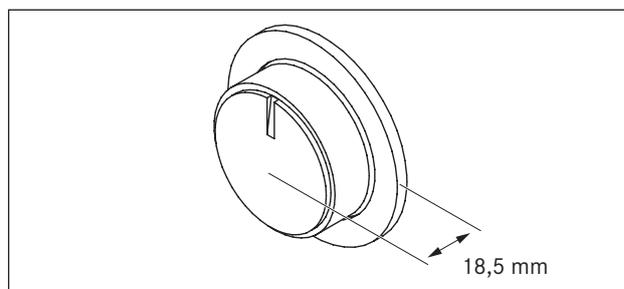


Fig. 5.13 Distance of the control knob

### 5.5.2 Installing the cooktop

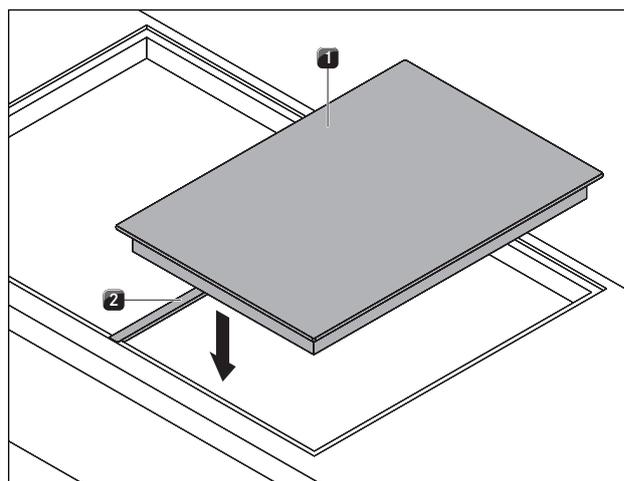


Fig. 5.14 Insert the mounting rail and cooktop

- [1] Cooktop
- [2] Mounting rail

- ▶ Place the mounting rail [2] in the worktop cut-out.
- ▶ Insert the cooktop [1].
- ▶ Align the cooktop [1] exactly.
- ▶ Align the mounting rail [2] so that it is positioned evenly under the cooktop and the cooktop extractor PL540.

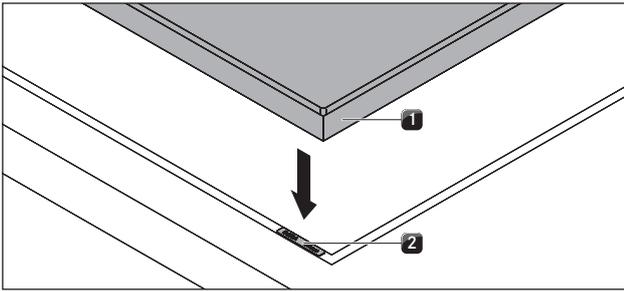


Fig. 5.15 Cooktop and height adjustment plates

- [1] Cooktop  
[2] Height adjustment plates

- If applicable, insert the height adjustment plate [2].



Fig. 5.16 Mounting brackets

- [1] Screw  
[1] Mounting bracket

- Fasten the cooktop [1] using the mounting brackets [2].  
► Tighten the mounting bracket screws [1] with max. 10 Nm.  
► Verify that the alignment is correct.  
► Seal the devices with black heat-resistant silicone sealing compound after the installation work is completed.

### Connecting the cooktop and the control box

- Create the connection between the cooktop and the control box.  
► Firstly connect the yellow/green earthing cable to the indicated point on the control box.



Earthing symbol

- Now connect the multi-pin, colour-coded plugs on the relevant cooking zone to the corresponding colour-coded sockets on the control box.

### Connecting the heating element to the control box

**INFO** Never bend the temperature sensor line.

Connect the colour-coded temperature sensor to the bottom of the Tepan cooktop using the relevant slot.

- Remove the cover plate of the temperature sensor slot by pushing the springs together.  
► Insert the corresponding temperature sensor into the matching coloured slot.  
► Ensure that the temperature sensor is engaged in the slot straight.  
► To secure the temperature sensor, insert the cover plate from the back into the slot.  
► Ensure that the cover plates are positioned tightly against the housing.

## 5.6 Power connection

- Observe all safety and warning information (see the Safety chapter).  
► Observe all national and regional laws and regulations as well as the supplementary regulations of the local utility companies.

**INFO** The power connection may only be established by a certified specialist. He/she also assumes responsibility for the proper installation and commissioning.

The power supply line for use (pre-assembled) must be at least Type H05VV-F or H05VVH2-F.

- Cross-section: 3G2.5 mm<sup>2</sup> with 1-phase connection
- Cross-section: 4G2.5 mm<sup>2</sup> with 2-phase connection
- If the connection line has been damaged this must be replaced by a special connection line. This may only be done by an authorized member of the After Sales Service team.

### Establishing the power connection

- Switch off the main switch/automatic circuit breaker before connecting the cooktop.

- ▶ Protect the main switch/automatic circuit breaker from being switched on without permission.
- ▶ Make sure the device is not energised.
- ▶ Only connect the cooktop using a permanent connection to a power supply cable.

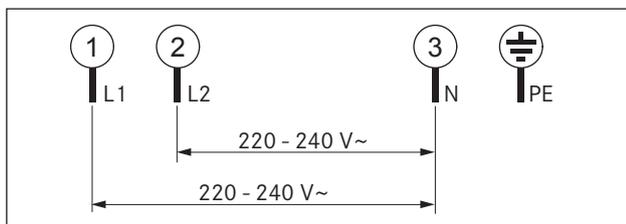


Fig. 5.17 Connection diagram 2-phase

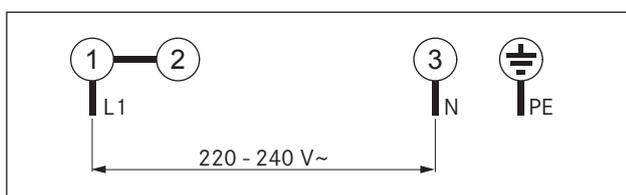


Fig. 5.18 Connection diagram 1-phase

- ▶ Create the connection between the cooktop and the control box.
- ▶ Verify that the installation was done correctly.
- ▶ Switch on the main switch/automatic circuit breaker.
- ▶ Put the cooktop into operation (see the Operation section).
- ▶ Check all the functions are working correctly.

## 5.7 Handover to user

Once installation is done:

- ▶ Explain the important functions to the user.
- ▶ Explain all safety-relevant aspects of operation and handling to the user.
- ▶ Provide the user with the accessories and operating and installation instructions to be kept in a safe place.

## 6 Operation

- ▶ Observe all safety and warning information during operation (see the Safety chapter).

**INFO** The cooktop may only be operated when the stainless steel grease filter is installed (see operating instructions for cooktop extractor).

**INFO** Clean the cooking zone before using the cooktop for the first time (see the Cleaning chapter).

**INFO** Preheat the grilling zone for 8-10 minutes before it is used each time.

### 6.1 Initial operation

The following phenomena are not errors relating to the grill plate; its function is in no way impaired by them:

- Switch the grilling zone to power level 8 for approx. 25 minutes before using it for the first time. Disturbing odours may occur during this process.
- When grilling or heating up the grill zone to the maximum setting, the stainless steel plate will turn slightly brown.
- If the grill plate is used frequently, the grilling surface may bulge slightly in the middle over the central zone division.

### 6.2 Switching cooktop on/off

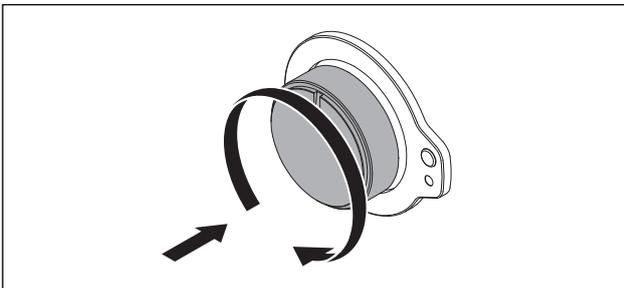


Fig. 6.1 Push and pull control knob

#### 6.2.1 Switch on the grilling zone

##### Child safety lock

The push and pull mechanism of the control knob prevents the cooking zone from being accidentally switched on.

- ▶ Push and turn the control knob to power level 1 to switch on the grilling zone.

■ The operating indicator light is active.

##### Switch off the grilling zone

- ▶ Turn the control knob to power level 0, to switch off the grilling zone.

- The operating indicator light is inactive.
- The cooktop is switched off when there are no longer any active grilling zones.

#### Power levels

##### 6.2.2 Adjusting the power level

- ▶ Turn the control knob to set the respective power level between 1 - 9.

Power level	Surface temperature
1	approx. 60°C
9	250°C

Tab. 6.1 Adjusting the power level

## 7 Cleaning and Maintenance

- ▶ Observe all safety and warning information (see the Safety chapter).
- ▶ Follow the enclosed manufacturer's information.
- ▶ Make sure that the cooktop and cooktop extractor have been switched off completely and have cooled down prior to the planned cleaning and maintenance work to prevent injury (see the Operation chapter).
- Regular cleaning ensures the longevity of the product and optimal functioning.
- ▶ Adhere to the following cleaning and maintenance cycles:

Component	Cleaning cycle
Control knob	immediately after every soiling
Cooktop	immediately after every soiling every week thoroughly with standard commercially available cleaning agents

Tab. 7.1 Cleaning cycles

### 7.1 Cleaning agents

**INFO** Due to the use of aggressive cleaning agents and abrasion caused by the pot bases the surface will become damaged and dark stains will occur.

You need a special Tepan scraper and suitable cleaning agents to clean the cooktop.

- ▶ Never use steam cleaners, abrasive sponges, scouring pads, or chemically aggressive cleaning agents (e.g. baking oven spray).
- ▶ Make sure that the cleaning agent does not contain any sand, soda, acids or chloride.

### 7.2 Maintaining the cooktop

- ▶ Do not use the cooktop as a worktop or shelf.
- ▶ Do not push or pull cookware across the cooktop.
- ▶ Keep the cooktop clean.
- ▶ Remove any kind of soiling immediately.

### 7.3 Cleaning the cooktop

**INFO** When the cooktop extractor is switched on, the stainless steel grease filter must be installed to ensure that no small and light objects, such as cleaning wipes made of fabrics or paper are sucked in (see operating instructions for the cooktop).

#### 7.3.1 Cleaning the stainless steel grill surface

**INFO** Only use the scraper on the grill surface. Otherwise, damage may occur on the surface.

**INFO** Clean the stainless steel surface in the polishing direction only.

**INFO** Do not apply citric acid to the adjacent surfaces of the cooktop and countertop as the citric acid may damage them.

**INFO** Do not use stainless steel cleaning agents on the stainless steel surface or stainless steel grill surface.

- ▶ Ensure that the cooktop is switched off (see the Operating chapter).

#### Light soiling

- ▶ Wait until the cooking zone has cooled down and is approx. 30°C.
- ▶ Remove light soiling with a damp cloth and detergent.
- ▶ Use a soft cloth to dry off the surface that has been cleaned with water in order to avoid water and scale marks (yellowish discolouration).

#### Normal soiling

- ▶ Wait until the cooking zone has cooled down and is approx. 80 - 90 °C.
- ▶ Now, apply cold clean water to the grill surface that is still warm.
- ▶ Leave the water to soak for approx. 15 minutes.
- ▶ Then, remove all coarse soiling and food residues from the grill surface with a Tepan scraper.
- ▶ Remove any remaining soiling and residual water with a clean cloth.
- ▶ Dry the cooktop with a clean cloth.

#### Heavy soiling

- ▶ Remove heavy soiling while the cooktop is still warm at approx. 80 - 90 °C.
- ▶ Dissolve a tablespoon of citric acid (approx. 10-15 ml) with hot water (approx. 200 ml) in a separate bowl.
- ▶ Now apply the liquid to the warm stainless steel grill surface.
- ▶ Leave the liquid to soak for approx. 5 - 8 minutes.

- ▶ Remove any baked-on grill residues from the grill surface with a plastic brush.
- ▶ Remove the remaining soiling and residual water-citric mixture (citric acid) completely with a clean cloth.
- ▶ Now, apply cold clean water to the grill surface.
- ▶ Remove any remaining soiling and residual water with a clean cloth.
- ▶ Dry the cooktop with a clean cloth.

Coloured changes and small scratches are not cooktop damage. They do not impact on the function of the cooktop and the stability of the stainless steel grill surface.

Discolourations to the cooktop arise from residues which are not removed and have been burnt in.

### **7.3.2 Cleaning the control knobs**

- ▶ Ensure that the cooktop is switched off (see the Operating chapter).
- ▶ Clean only the control knob by hand.
- ▶ Pull off the control knob.
- ▶ Clean the control knob with a soft brush.
- ▶ Rinse the control knob well after cleaning.
- ▶ Allow the control knob to dry thoroughly.
- ▶ Re-insert the clean and dry control knob into the slot after the cleaning is completed.

## 8 Troubleshooting

► Observe all safety and warning information (see the Safety chapter).

Operating situation	Cause	Remedy
The cooktop cannot be switched on.	The fuse or the automatic circuit breaker of the electrical installation of the apartment and/or house is defective.	Replace the fuse. Switch the safety cut-out back on.
	The fuse or the automatic circuit breaker trips several times.	Call the BORA Service Team.
	The power supply is disconnected.	Have a specialist electrician inspect the power supply.
Odours and vapours arise when the new cooktop is put into operation.	This is normal on brand-new appliances.	Wait a few operating hours. Contact the BORA Service Team if the odour persists.

Tab. 8.1 Resolving a fault

► In all other instances, call the BORA Service Team (see the Warranty, service and spare parts chapter).

## 9 Decommissioning, disassembly and disposal

- ▶ Observe all safety and warning information (see Safety chapter).
- ▶ Follow the enclosed manufacturer's information.

### 9.1 Decommissioning

Decommissioning is considered the final decommissioning and disassembly. After decommissioning, the device can either be built into another piece of furniture, sold on privately, or disposed of.

---

**INFO** Disconnecting and connecting the electricity and gas connection may only be carried out by certified experts.

---

- ▶ Switch off the device before decommissioning (see Operating chapter)
- ▶ Disconnect the device from the voltage supply.

### 9.2 Disassembly

The removal requires that the device is accessible for disassembly and was separated from the voltage supply. On gas-powered devices, make sure that the gas connection is complete.

- ▶ Undo the mounting brackets.
- ▶ Remove the silicone joints.
- ▶ Remove the device from the worktop upwards.
- ▶ Remove further accessory parts.
- ▶ Remove the old appliance and dirty accessory as described under "Disposing of the product in an environmentally friendly way".

### 9.3 Disposing of the product in an environmentally friendly way

#### Disposal of transport packaging

---

**INFO** The packaging protects the device against transport damages. The packaging is made of materials that are environmentally friendly and easy to dispose of and can therefore be recycled.

---

Returning the packaging material into the material cycle saves resources and reduces the waste production. Your specialist supplier will take the packaging back.

- ▶ Hand the packaging to your specialist supplier or
- ▶ Dispose of the packaging properly taking into account the regional regulations.

#### Disposing of the old appliance



Electrical devices marked with this symbol should not be disposed of as household waste at the end of its life. They must be taken to a collection centre for recycling electrical or electronic non-heating appliances. For information, please contact your city or local authorities.

Waste electric and electronic equipment often still contains valuable materials. They do, however, also contain harmful substances that were required for their correct functioning and safety. When disposed of in the residual waste or if not handled correctly, they may cause harm to the health of people and the environment.

- ▶ Therefore do not dispose of your old appliance as household waste.
- ▶ Take the old appliance to a regional collection centre for return and recycling of electronic and electrical parts and other materials.

# 10 Warranty, service and spare parts

- ▶ Observe all safety and warning information (see Safety chapter).

## 10.1 Warranty

The warranty period shall be 2 years.

## 10.2 Service

### BORA Service:

see reverse side of operating and assembly instructions



- ▶ In the case of faults you cannot fix yourself, contact your BORA specialist supplier or the BORA Service Team.

The After Sales Service will require the type designation and the serial number of your device (FD number). This information is provided on the nameplate or on the back of the manual as well as on the device.

## 10.3 Spare parts

- ▶ Only use original spare parts when making repairs.

---

**INFO** Spare parts can be obtained from your BORA dealer, the BORA online service website at [www.bora.com/service](http://www.bora.com/service) or by calling the service number provided.

---

**Nameplate:**



**Germany::**

**BORA Lüftungstechnik GmbH**

Rosenheimer Str. 33  
83064 Raubling  
Germany  
T +49 (0) 8035 / 907-240  
F +49 (0) 8035 / 907-249  
info@bora.com  
www.bora.com

**Australia – New Zealand:**

**BORA APAC Pty Ltd**

A/ 91-95 Victoria Road  
Drummoyne NSW 2047  
Australia  
T +61 2 7900 5580  
F +61 2 8076 3514  
info@boraapac.com.au  
www.boraapac.com.au

**Austria:**

**BORA Vertriebs GmbH & Co KG**

Prof.-Dr.-Anton-Kathrein-Straße 3  
6342 Niederndorf  
Österreich  
T +43 (0) 5373 / 62250-0  
F +43 (0) 5373 / 62250-90  
mail@bora.com  
www.bora.com

**Europe:**

**BORA Holding GmbH**

Prof.-Dr.-Anton-Kathrein-Straße 3  
6342 Niederndorf  
Austria  
T +43 (0) 5373 / 62250-0  
F +43 (0) 5373 / 62250-90  
mail@bora.com  
www.bora.com

