

Kurzanleitung Funktionen und Bedienung

Quick guide functions and operation

Guía rápida funciones y uso

Guide rapide fonctions et utilisation

Guida rapida funzioni e uso

Snelgids functies en bediening

PKA3/PKA3AB, PKAS3/PKAS3AB


Abzugsautomatik

Automatic extractor function/


Mecanismo automático de extracción/

Aspiration automatique/Sistema di aspirazione automatica/


Automatische afzuiging

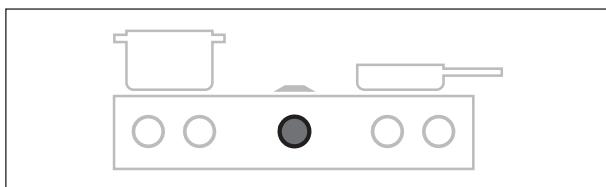

aktivieren/activate/activar/activer/attivare/activeren

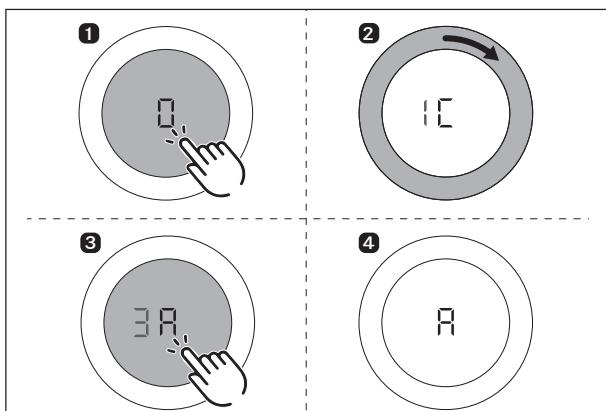

deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

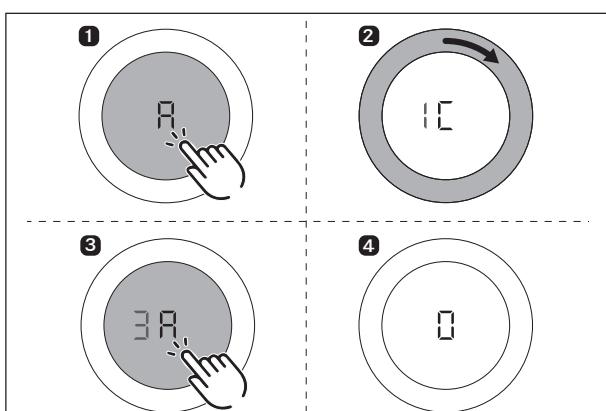

PKA3/PKA3AB, PKAS3/PKAS3AB


Kurzzeit-Timer (Eieruhr)

Short-time timer (egg timer)/


Alarma de tiempo corto (temporizador de cocina)/

Minuteur d'alarme/Contaminuti breve/


Timer voor korte tijdsspanne (eierwekker)

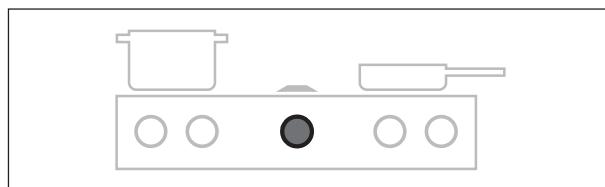

aktivieren/activate/activar/activer/attivare/activeren

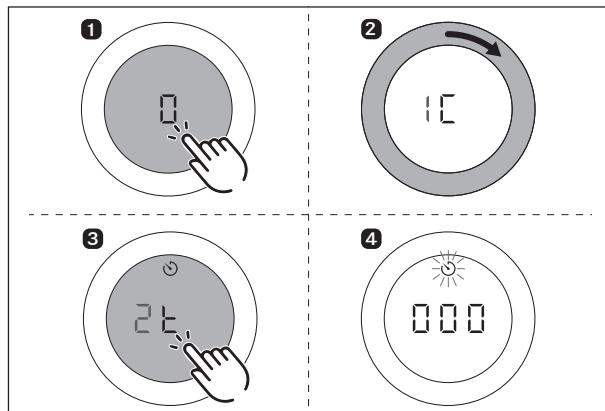


Zeit einstellen / set time / ajustar el tiempo / régler la minuterie / impostazione tempo / Tijd instellen

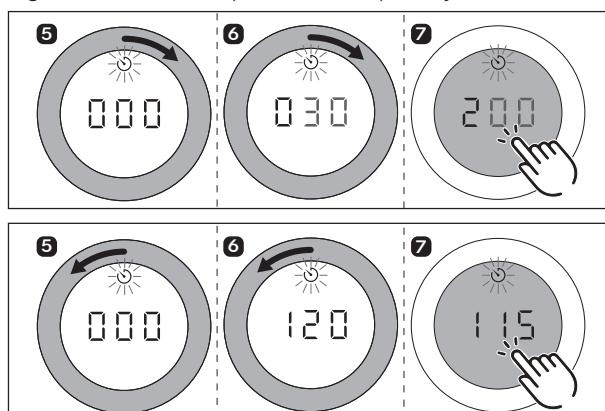


PKA3/PKA3AB, PKAS3/PKAS3AB, PKFI3/PKFI3AB, PKI3,
PKIW3, PKC3, PKCB3, PKCH3,PKG3,PKT3

Kindersicherung


Childproofing feature/Dispositivo de seguridad para niños/
Sécurité enfant/Protezione bambini/Kinderbeveiliging

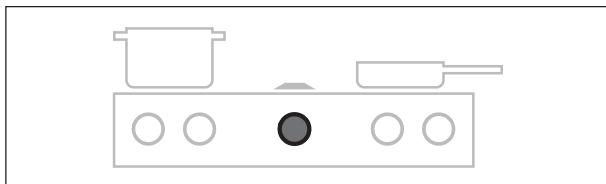


aktivieren/activate/activar/activer/attivare/activeren

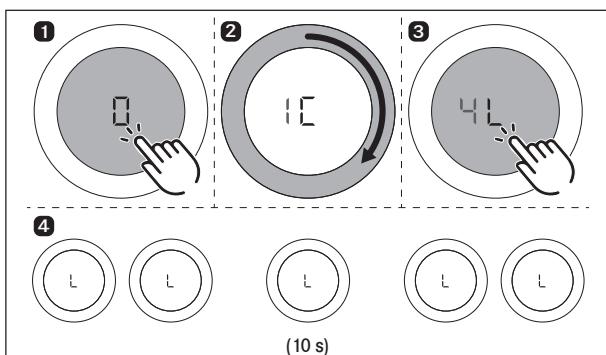

für einen Kochvorgang deaktivieren / deactivating for a cooking session / desactivar para un proceso de cocción / désactivez pour un processus de cuisson / disattivazione per un processo di cottura / voor een kookproces deactiveren

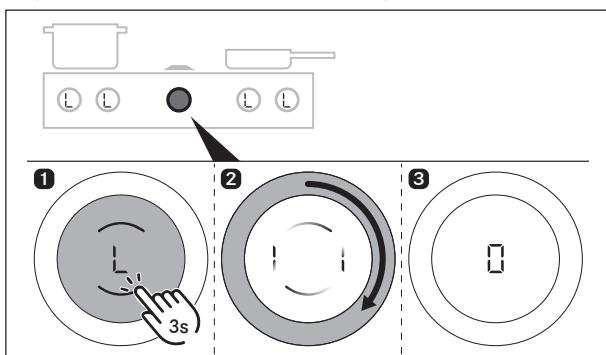


deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

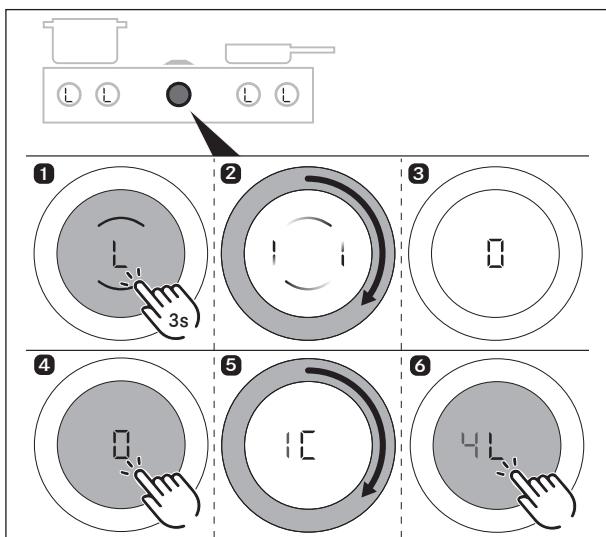


PKA3/PKA3AB, PKAS3/PKAS3AB

Reinigungsfunktion


Cleaning function/Función de limpieza/
Fonction de nettoyage/Funzione di pulizia/Reinigingsfunctie

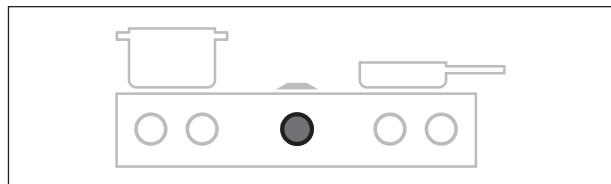

aktivieren/activate/activar/activer/attivare/activeren

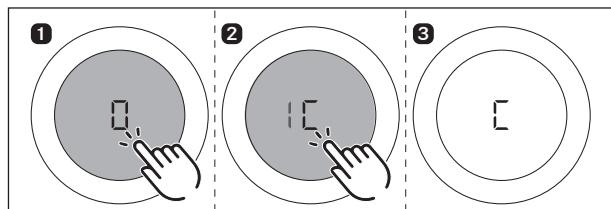

deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

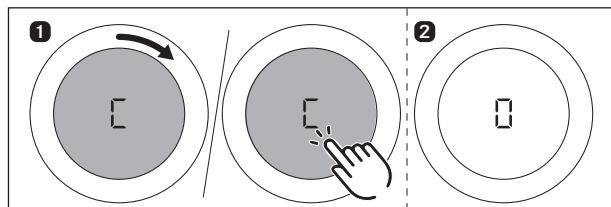


PKA3/PKA3AB, PKAS3/PKAS3AB, PKFI3/PKFI3AB,
PKI3, PKIW3, PKC3, PKCB3, PKCH3,PKG3,PKT3


Pausefunktion

Pause function/Función de pausa/Fonction de pause/
Funzione pausa/Pauzfunctie

aktivieren/activate/activar/activer/attivare/activeren

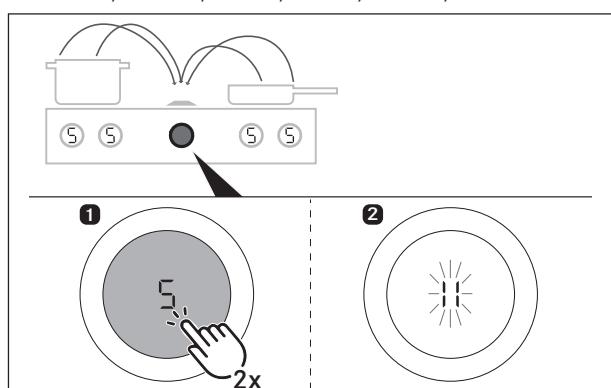

deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

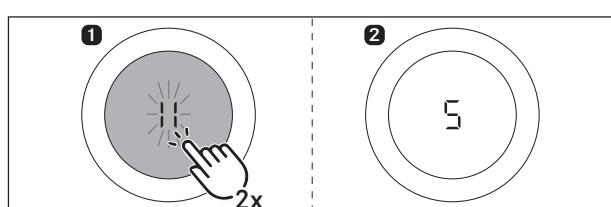

PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3

Variable Warmhaltefunktion


Variable heat retention function/

Función de mantenimiento de la temperatura variable/

Fonction de maintien au chaud variable/


Funzione mantenimento calore variabile/

Variabele warmhoudfunctie

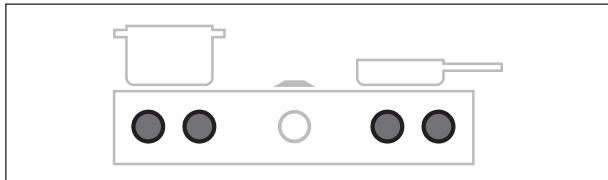


aktivieren/activate/activar/activer/attivare/activeren

PKFI3/PKFI3AB, PKI3, PKIW3, PKG3

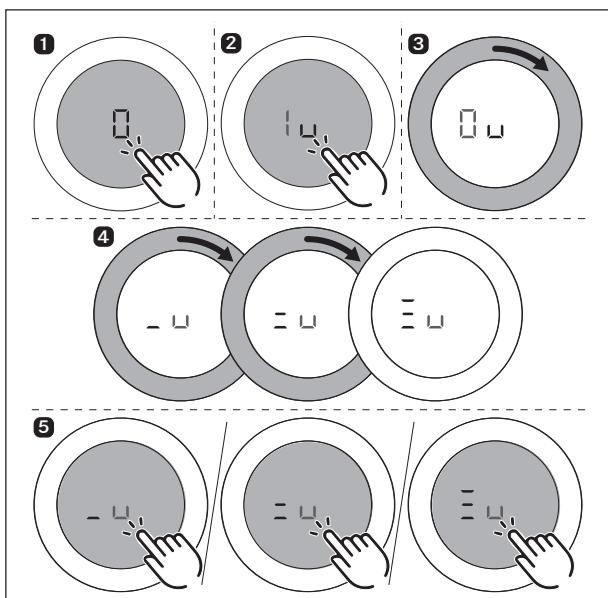


aktivieren/activate/activar/activer/attivare/activeren

PKC3, PKCB3, PKCH3

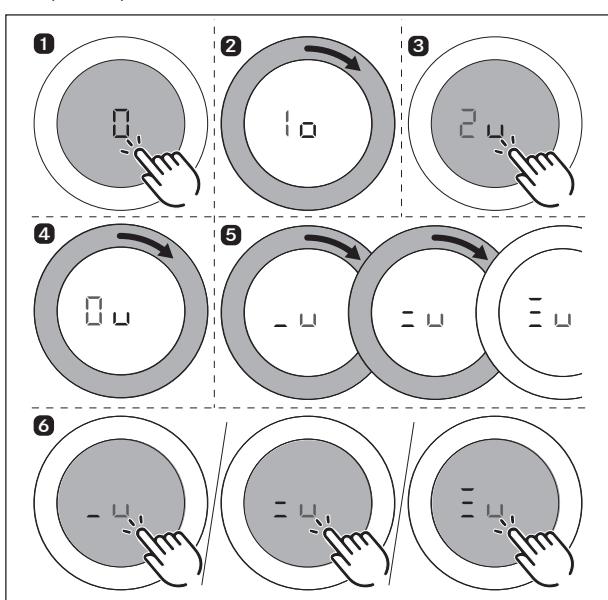

deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

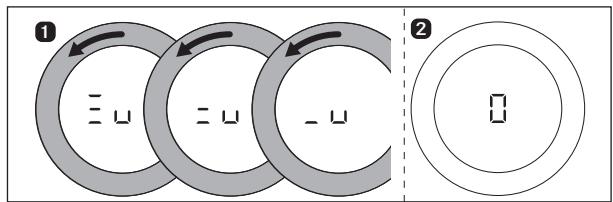

PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3

Timer-Funktion (Abschaltautomatik)


Timer function (automatic cut-off)/

Función de temporizador (desconexión automática)/


Fonction de minuteur de cuisson (arrêt automatique)/

Funzione timer (sistema di spegnimento automatico)/


Timerfunctie (automatische uitschakeling)

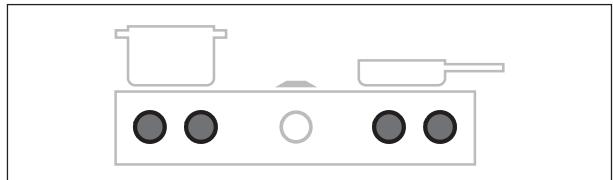

aktivieren/activate/activar/activer/attivare/activeren

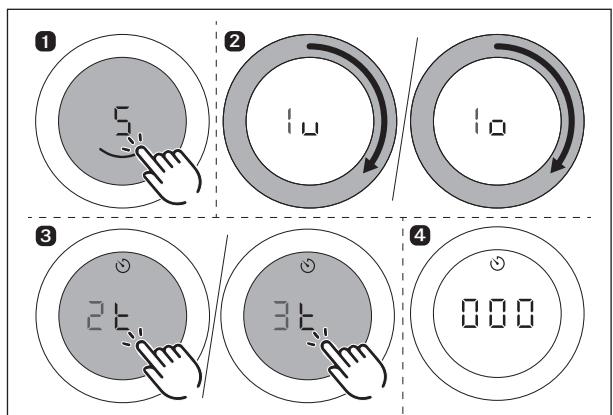

Zeit einstellen / set time / ajustar el tiempo / régler la minuterie / impostazione tempo / Tijd instellen

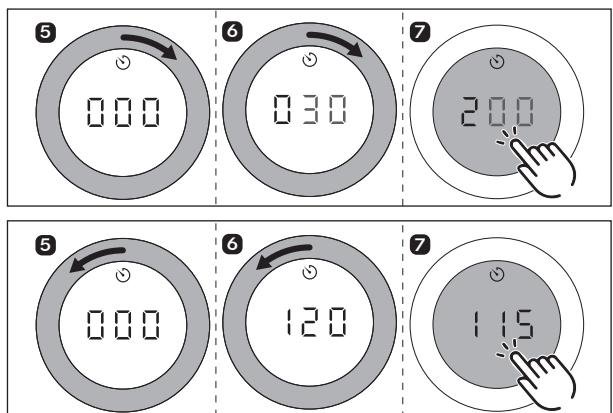

PKFI3/PKFI3AB, PKI3, PKIW3, PKC3, PKCB3, PKCH3, PKG3


Ankochautomatik

Automatic heat up function/


Sistema automático de precalentamiento/

Cuisson automatique/Avvio di cottura automatico/

Automatische aankookfunctie

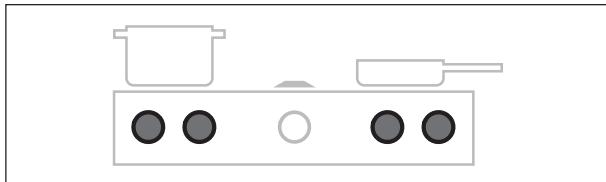

aktivieren/activate/activar/activer/attivare/activeren

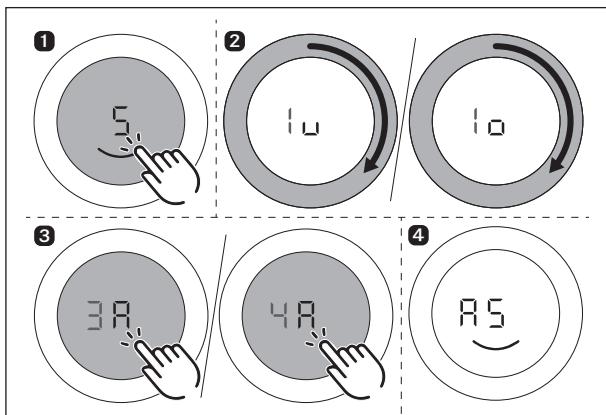

PKC3, PKCB3, PKCH3

Heizkreis-Zuschaltung – 2-Kreis, 3-Kreis, Bräter


Additional ring switching – 2-ring, 3-ring, roaster

Conexión de círculos calentadores – 2 círculos, 3 círculos, asador


Activation de feux – 2 feux, 3 feux, sauteuse

Attivazione circuito di riscaldamento – 2 circuiti, 3 circuiti, bistecchiera

Bijschakeling van verwarmingsringen – 2 ringen, 3 ringen, braadslee

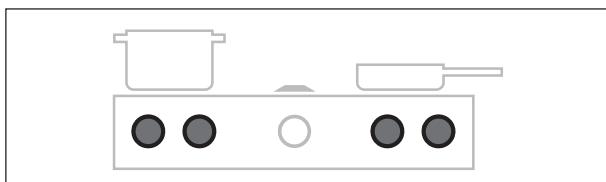

aktivieren/activate/activar/activer/attivare/activeren

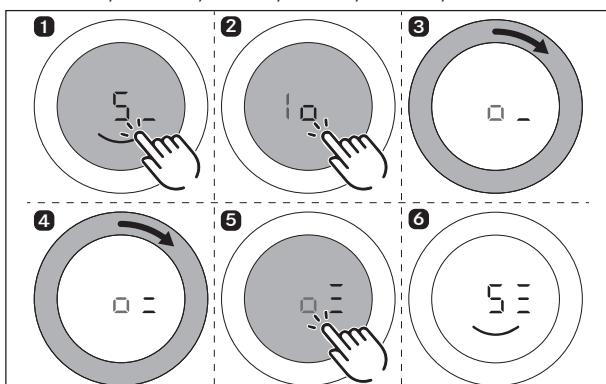


PKFI3/PKFI3AB, PKT3

Brückenfunktion

Bridging function/Función puente/Fonction de pont/

Funzione bridge attiva/Brugfunctie

aktivieren/activate/activar/activer/attivare/activeren

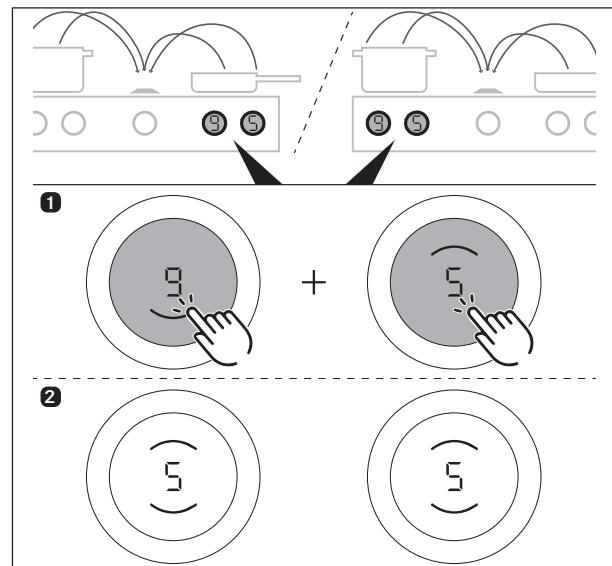

deaktivieren/deactivate/desactivar/désactiver/disattivare/deactiveren

